Operator's Manual

CRAFTSMAN®

TOOL STAND

Model No.
351.192104

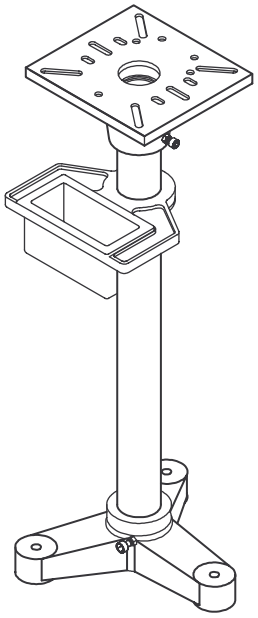

- **Safety**
- **Assembly**
- **Operation**
- **Parts List**
- **Español**

CAUTION: Read and follow all Safety Rules and Operating Instructions before First Use of this Product.

Sears, Roebuck and Co., Hoffman Estates, IL 60179 U.S.A.

2666.00 Draft (03/08/99)

TABLE OF CONTENTS

Warranty 2
Safety Rules 2
Assembly 2
Operation 3
Parts Illustration and List 4-5
Español 6-7

WARRANTY

FULL ONE YEAR WARRANTY ON CRAFTSMAN TOOL STAND

If within one full year from the date of purchase, this Craftsman Tool Stand fails due to a defect in material or workmanship, Sears will repair it free of charge.

Warranty service is available by simply returning the stand to the nearest Sears Store or Service Center throughout the United States.

This warranty gives you specific legal rights and you may have other rights which vary from state to state.

Sears, Roebuck and Co., Dept. 817WA, Hoffman Estates, IL 60179

SAFETY RULES

- Know the tool stand and the power tool. Read and understand operator's manuals and other instructions provided.
- Securely bolt tool stand to floor.
- Use only accessories designed for your tool stand or power tool.
- Make sure power tools and accessories are securely clamped.
- Always check your set up. For example, rotate accessory by hand before applying power.
- Keep your mind on your work. Be alert.
- Dress properly. Do not wear jewelry, gloves, or loose clothing.
- Wear a face shield or safety glasses.
- Never place hands in jeopardy.

ASSEMBLY

Refer to Figure 2.

- Slide column into base (Key Nos. 2 and 3); secure by tightening hex head bolts (Key No. 6) against column. Tighten hex nuts (Key No. 7) against base to secure bolts.
- Slide water pot holder (Key No. 4) over column. Tighten hex head bolt and nut (Key Nos. 6 and 7) to secure holder.
- Slide top (Key No. 1) over column and secure with bolt and nut (Key No. 6 and 7).
- Slide water pot (Key No. 5) into holder. Adjust pot holder height as required.
- Secure base to floor to ensure maximum stability and safety. (Hardware not included.)

MOUNT GRINDER

- Use hex head bolts with flat washers, lock washers and hex nuts to secure grinder to stand top. (Hardware not included.)

OPERATION

DESCRIPTION

The Sears Model 192104 Tool Stand is constructed of heavy cast iron and steel, and is designed for use with most bench grinders. Cast iron top is provided with slots and holes for securely mounting bench grinder. A water pot is provided for quenching workpiece after grinding.

SPECIFICATIONS

Shipping Weight . . . . . 60 lbs

Column. . . . . 3½″ O.D. steel

DIMENSIONS

Refer to Figure 1.

Base width. . . . . 14½ x 16¼″

Height . . . . . 31¾″

Table size . . . . . 10 x 11″

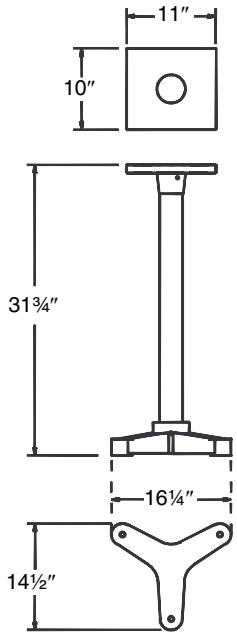

Figure 1 - Dimensions

Model 351.192104

Figure 2 - Replacement Parts Illustration for Tool Stand

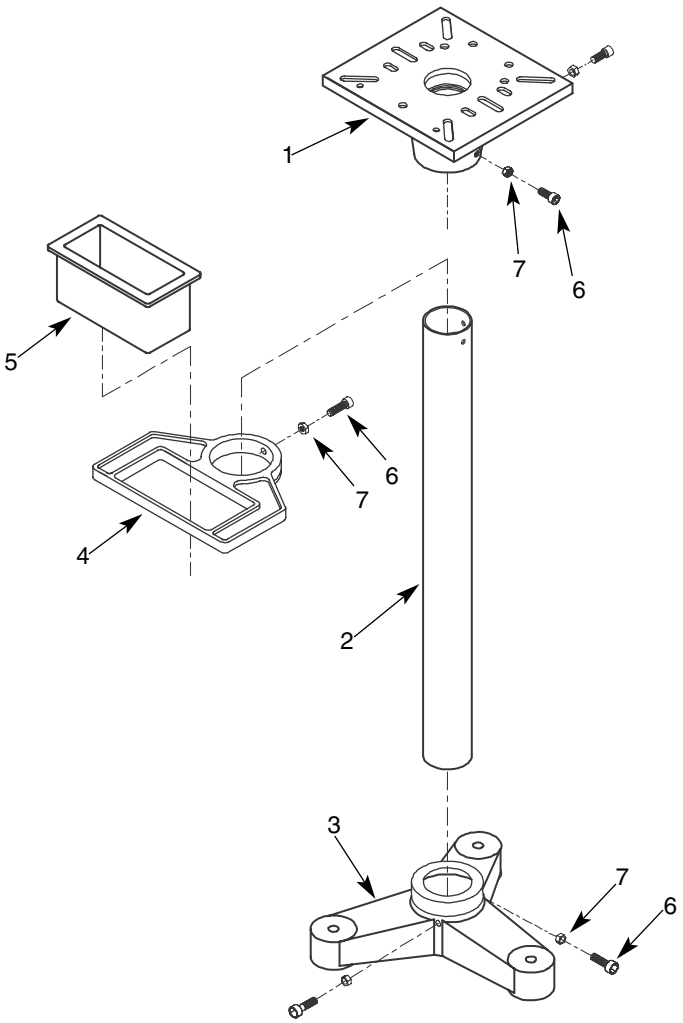

REPLACEMENT PARTS LIST FOR TOOL STAND

KEY NO.	PART NO.	DESCRIPTION	QTY.
1	4889.00	Top	1
2	4886.00	Column	1
3	4885.00	Base	1
4	4887.00	Water Pot Holder	1
5	4888.00	Water Pot	1
6	7186.00	10-1.5 x 30mm Socket Head Bolt	5
7	STD841015	10-1.5mm Hex Nut*	5
Δ	2666.00	Operator's Manual	1

Recommended Accessories		
Δ	Grinding Wheel Dresser	925282

* Standard hardware item available locally.

Δ Not Shown

PEDESTAL DE HERRAMIENTAS

Modelo No.
351.192104

PRECAUCION: Lea este manual y siga las Reglas de Seguridad y las Instrucciones de Operación, antes de usar este producto por la primera vez.

CONTENIDO

Inglés 2-3
Ilustración y Lista de Partes 4-5
Garantía. 6
Reglas de Seguridad 6
Montaje 7
Operación 7

GARANTIA

UN AÑO COMPLETO DE GARANTIA PARA EL PEDESTAL DE HERRAMIENTAS CRAFTSMAN

Si dentro de un año a partir de la fecha de compra, este pedestal de herramientas Craftsman falla debido a un defecto en el material o en la mano de obra, Sears lo reparará gratis.

Para obtener este servicio de garantía, simplemente devuelva el pedestal de herramientas al centro de servicio más cercano de Sears, en los Estados Unidos.

Esta garantía le da derechos legales específicos y también puede tener otros derechos que varían de un estado al otro.

Sears, Roebuck and Co., Dept. 817WA, Hoffman Estates, IL 60179

REGLAS DE SEGURIDAD

- Conozca el pedestal de herramientas y la herramienta mecánica. Lea y entienda los manuales del operador y las otras instrucciones que se proporcionan.
- Aperne firmemente el pedestal de herramientas en el piso.
- Use solamente accesorios diseñados para su pedestal o para la herramienta mecánica.
- Asegúrese que la herramientas mecánica y los accesorios estén agarrados firmemente.
- Siempre revise su preparación. Por ejemplo, haga rotar el accesorio manualmente antes de aplicar la energía.
- Mantenga la mente en su trabajo. Esté alerta.
- Vístase adecuadamente. No use joyas, guantes ni ropa suelta.
- Use una protección para la cara o anteojos de seguridad.
- Nunca ponga las manos en peligro.

MONTAJE

Refiérase a la Figura 2.

- Deslice la columna en la base (Clave Nos. 2 y 3); asegúrela apretando los pernos de cabeza hexagonal Clave No. 6) en contra de la columna. Apriete las tuercas hexagonales (Clave No. 7) en contra de la base para asegurar los pernos.
- Deslice el sujetador del contenedor de agua (Clave. No. 4) sobre la columna. Apriete el perno de cabeza hexagonal y la tuerca (Clave Nos. 6 y 7) para asegurar el sujetador.
- Deslice la parte superior (Clave No. 1) sobre la columna y asegúrela con el perno y la tuerca (Clave Nos. 6 y 7).
- Deslice el contenedor de agua (Clave No. 5) en el sujetador. Ajuste la altura del sujetador de agua según sea necesario.
- Asegure la base al piso para lograr una estabilidad y una seguridad máximas. (Los artículos de ferretería no vienen incluidos.)

MONTAJE DE LA ESMERILADORA

- Use los pernos de cabeza hexagonal con las arandelas planas, las arandelas de seguridad y las tuercas hexagonales para asegurar la esmeriladora a la parte superior de la plataforma. (Los artículos de ferretería no vienen incluidos.)

OPERACION

DESCRIPCION

El pedestal de herramientas Modelo 192101 Sears ha sido fabricado de acero y hierro fundido de tipo pesado y ha sido diseñado para usarse con la mayoría de las esmeriladoras de banco. La parte superior de hierro fundido viene con ranuras y agujeros para montar la esmeriladora de banco en forma segura. Se proporciona un contenedor de agua para sumergir la pieza de trabajo después de esmerilar.

ESPECIFICACIONES

Peso de envío. . . . . 27,2 kg
Columna. . . . . Acero de 9 cm diá. ext.

DIMENSIONES

Refiérase a la Figura 1.

Ancho de la base . . . . . 36,8 x 41,3 cm
Altura. . . . . 80,5 cm
Tamaño de la mesa . . . . . 25,4 x 28 cm

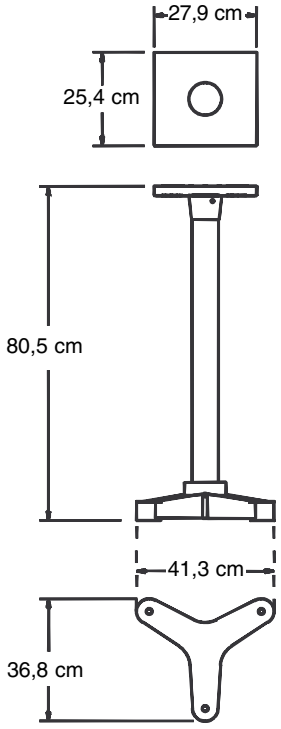

Figura 1 - Dimensiones

For the repair or replacement parts you need delivered directly to your home
Call 7 am - 7 pm, 7 days a week

1-800-366-PART
(1-800-366-7278)

Para ordenar piezas con entrega a domicillo – 1-800-659-7084

For major brand repair service
Call 24 hours a day, 7 days a week

1-800-4-REPAIR
(1-800-473-7247)

Para pedir servicio de reparación
1-800-659-7084

For the location of a Sears Parts and Repair Center in your area
Call 24 hours a day, 7 days a week

1-800-488-1222

When requesting service or ordering parts, always provide the following information:

- **Product Type**
- **Model Number**
- **Part Number**
- **Part Description**

SEARS
REPAIR SERVICES
America's Repair Specialists